

# Troubleshooting

## USER MANUAL FOR FIO2



## ***1. Troubleshooting***

### ***1.1 The apparatus does not switch on***

- The display is normally turned OFF. Press any keys to turn it on.
- Be sure the external power supply is connected and turned on
- Be sure that battery pack is properly connected

### ***1.2 Temperature measurement doesn't work***

- Verify thermo sensor cable integrity

### ***1.3 Pressure measurement doesn't work***

- Verify pressure sensor cable integrity
- Verify that all the insulation valves are open

### ***1.4 Digital outputs do not work***

- Verify the connections to terminal block

### ***1.5 Serial communication doesn't work***

- Verify proper connection of the serial line to terminal blocks

### ***1.6 Bluetooth communication doesn't work***

- The Bluetooth is active if the display is turned ON
- Verify the pairing between FIO2 and laptop is OK (device is connected)
- Verify proper connection setup in your application software (COM port, 8, None, 1)

### ***1.7 Display is not visible***

- Type any keys to turn ON the display
- Please verify display contrast: in the main page press "F4" button and increase contrast.