## **ADDITIONAL SPRING**

White Spring 4 x 100 x 35 Fiorentini Code: 2701541

Range from 5 Psi to 15 Psi



Pietro Fiorentini S.p.A. via E.Fermi 8/10 I-36057 Arcugnano (VI) Italy

6057 Arcugnano (VI) I-20124 Milano y Italy

Tel. +39 0444 968.511 Fax. +39 0444 960.468 Tel. +39 02 696.14.21 Fax. +39 02 688.04.57

via Rosellini 1

www.fiorentini.com





# **APERVAL 101**

STARTING UP INSTRUCTION

### **ADDITIONAL SPRING**

White Spring 4 x 100 x 35 Fiorentini Code : 2701541

Range from 5 Psi to 15 Psi



Pietro Fiorentini S.p.A. via E.Fermi 8/10 I-36057 Arcugnano (VI) Italy

via Rosellini 1 I-20124 Milano Italy

Tel. +39 0444 968.511 Fax. +39 0444 960.468 Tel. +39 02 696.14.21 Fax. +39 02 688.04.57

www.fiorentini.com






## **APERVAL 101**

STARTING UP INSTRUCTION

### **STARING UP REGULATOR (FIG.1)**

- 1. Open the downstream vent valve
- 2. Turn AR100 valve at position 8 (fig.2)
- 3. Slowly open the ingoing block valve
- 4. Wait for the downstream pressure to reach about the setting value
- 5. Adjust the setting, alternatively acting on AR100 valve and pilot, so that it is reached at the lowest possible opening of AR100 valve
- 6. Close the downstream vent valve
- 7. Open very slowly the outgoing block valve

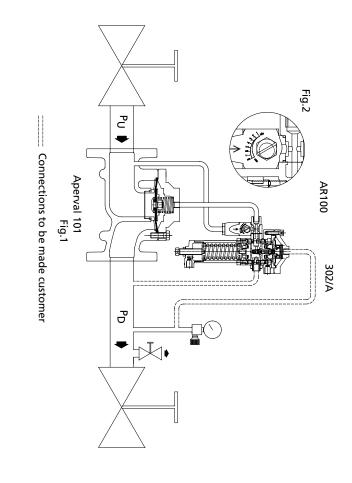

### STARING UP REGULATOR (FIG.1)

- 1. Open the downstream vent valve
- 2. Turn AR100 valve at position 8 (fig.2)
- 3. Slowly open the ingoing block valve
- 4. Wait for the downstream pressure to reach about the setting value
- 5. Adjust the setting, alternatively acting on AR100 valve and pilot, so that it is reached at the lowest possible opening of AR100 valve
- 6. Close the downstream vent valve
- 7. Open very slowly the outgoing block valve

